



44244 Fremont Blvd.
 Fremont, CA 94538
 Phone: 510 498-1171
 Fax: 510 498-1161

Contractors License # 483939
 www.syserco.com


Branch Office: Rohnert Park, CA

Microset Operating Instructions



Microset Instructions:

- To adjust the room temperature setpoint, press the “Warmer” or “Cooler” buttons. (This is the temperature you want the room to be. Please note that the school district has set parameters that will only allow you to heat or cool within a specific range.)
- To learn the current room temperature, press the “Room” button. (This is the temperature of the room at the moment.)
- To learn the Outside Air Temperature, press the “Outside” button. (This will show you the temperature of the air outside.)
- **Afterhours Mode:** When the display is blank the room is considered unoccupied and scheduled off. To turn the unit on (“afterhours mode”) simply push the “On” button. This will turn the unit on for 5 mins. To increase the timer, continue to push the “On” button. (The timer can be set for up to 2 hours.) Once the timer has been set you may adjust the room temperature as shown above. The unit will shut off automatically when the timer runs down.

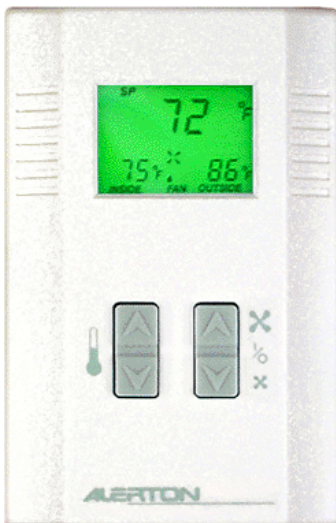

Microset II Instructions:

- To adjust the room temperature setpoint, press the Left Upper or Lower buttons near the image of the thermometer. These are your warmer and cooler buttons. (The number you select is the temperature you want the room to be. Please note that the school district has set parameters that will only allow you to heat or cool within a specific range.) The Room setpoint is the large number shown on the display.
- The room temperature is shown in the lower left corner of the display above the word “Inside.”
- The outside air temperature is shown in the lower right corner of the display.
- **Afterhours Mode:** When the display is blank the room is considered unoccupied and scheduled off. To turn the unit on (“afterhours mode”) simply push the Right Upper button near the image of the fan This will turn the unit on for 5 mins. To increase the timer, continue to push the Right Upper button. (The timer can be set for up to 2 hours.) Once the timer has been set you may adjust the room temperature as shown above. The unit will shut off automatically when the timer runs down.